

## CAUTION WHILE USING THE ULTRASONIC CUTTER

When the blade gets unsharpened, please make use that proper maintenance of the blade and blade clamp is made.

### MAINTENANCE


If you perform the following maintenance steps regularly, the cutter will perform for long time.

#### 1) **Blade Clamp**

When the blade clamp gets dirty, please clean it or exchange it with a new one.  
If the clamp gets saturated with residues after many uses, be sure is properly cleaned or replace it.

#### 2) **Horn**

Please clean inside the horn regularly w/ cotton swab.  
After maintenance, please be sure the screw is clean and properly fits in the horn.

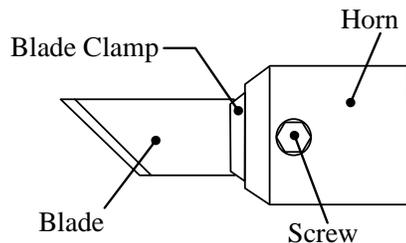

Please read the instructions before operation!!

### REQUEST OF SERVICE TO HONDA

- 1) **Maintenance Request:** Request a cleaning/maintenance service to Honda: Maintenance is not included part of the cutter warranty. As such, Honda Electronics will charge a fee to perform maintenance of the device, i.e. cleaning parts.  
Keep in mind that small residues within the blade and blade clamp can create an unusual vibration and malfunction.
- 2) **Reparation covered by warranty:** Please attach the warranty when you order the reparation. If you do not have, Honda will charge for any reparation even if the term is not expired.

Blade is sharp. Be careful using the blade to avoid accidents!!

- During blade exchange, please use protective gloves and glasses.
- The ultrasonic cutter is sharper than normal cutter. Please be careful when handling.
- Do not touch the blade with bare hands.
- During operation do not touch the blade or the horn.
- Please do not look directly into the blade during operation.
- Please read the instructions before operation

If the blade is not properly fixed, the cutter body will generate heat and stop working. Wait until it cools down and make sure the blade is well fixed before using it again. Be careful do not get burned.